


The choice of inside or outside peel is dictated by the line of spinnaker halyards. Beware of forming a twist at masthead.


### SPINNAKER – FOREDECK STARBOARD TAKE DOWN

- |   |  |
|---|--|
| <b>T/H:</b> Make decision to take spinnaker down and replace with headsail.             | <b>P:</b> Takes up on lazy (leeward) spinnaker guy.                          |
| <b>W:</b> Calls warning 'Drop spinnaker – forward takedown – up genoa.'                 | <b>W:</b> Calls <b>B</b> to 'Spike' spinnaker tack.                          |
| <b>M/B:</b> Bring up new genoa and attach tack, halyard and sheets to clew.             | <b>C:</b> Casts off spinnaker halyard.                                       |
| <b>P/S:</b> Run sheets through track cars and back to winches.                          | <b>H:</b> rounds yacht up towards the wind.                                  |
| <b>C:</b> Flakes down spinnaker halyard ready to run.                                   | <b>M/B:</b> Pull in lazy spinnaker sheet under genoa.                        |
| <b>W:</b> Gives order to 'Hoist genoa.'   | <b>S:</b> Releases spinnaker after guy.                                      |
| <b>M:</b> Jump hoists halyard at mast.  | <b>P:</b> Releases spinnaker sheet.  |
| <b>C:</b> Tails halyard around deck winch and when fully hoisted, calls 'Halyard made.' | <b>P:</b> Pulls spinnaker on the lazy guy under the boom into the cockpit.   |
| <b>P:</b> Tails new genoa sheet.  | <b>S/M:</b> Gather spinnaker in under genoa and pass down hatch for packing. |
| <b>G/S:</b> Grind winch until <b>P</b> calls 'Stop.'                                    | <b>P:</b> Tails genoa sheet as <b>H</b> rounds yacht up towards the wind.    |
| <b>W:</b> Calls order to 'Drop' spinnaker.  | <b>G/S:</b> Grind winch until <b>P</b> calls 'Stop.'                         |
| <b>B:</b> Takes up position on outboard end of pole ready to spike the tack.            | <b>N:</b> Tensions backstay for beating to windward.                         |
|   | <b>B/M:</b> Stow spinnaker pole and prepare to tack.                         |
|   | <b>Crew:</b> Move back to standard positions.                                |

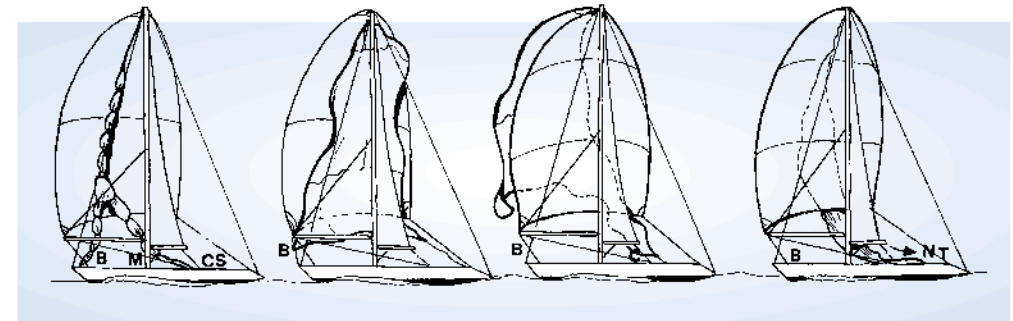

### SPINNAKER CHANGE – INSIDE PEEL – PORT GYBE

- |   |  |
|---|--|
| <b>T/H:</b> Make decision to change spinnaker.  | <b>C:</b> Tails halyard around deck winch and when fully hoisted, calls 'Halyard made.'  |
| <b>W:</b> Calls warning 'Spinnaker change – inside peel – up spinnaker.'  | <b>C/S:</b> Ease guy and after guy to allow pole to swing forward.                       |
| <b>M/B:</b> Bring up new spinnaker.   | <b>W:</b> Calls <b>B</b> to 'Spike' spinnaker tack.                                      |
| <b>C:</b> Flakes down spinnaker halyard ready to run.   | <b>B:</b> Spikes guy to release old spinnaker, then re-attaches guy to tack on new sail. |
| <b>B:</b> Prepares new spinnaker ready for hoisting inside existing sail. Takes lazy guy of set spinnaker and clips it on to clew of new sail as a temporary sheet. Clips foredeck stripper to tack of old sail and ties temporarily to deck, then transfers guy to new sail. | <b>C:</b> Takes up on spinnaker guy.   |
| <b>W:</b> Calls 'Hoist spinnaker.'  | <b>B:</b> Releases Stripper.   |
| <b>M:</b> Jump hoists second spinnaker halyard.   | <b>C/P/S:</b> Adjust spinnaker set.  |
|   | <b>W:</b> Calls 'Drop' spinnaker.  |
|   | <b>C:</b> Releases spinnaker halyard.  |
|   | <b>M/N:</b> Gather spinnaker in under boom and pass down hatch for packing.              |
|   | <b>Crew:</b> Tidy up and return to standard positions.                                   |

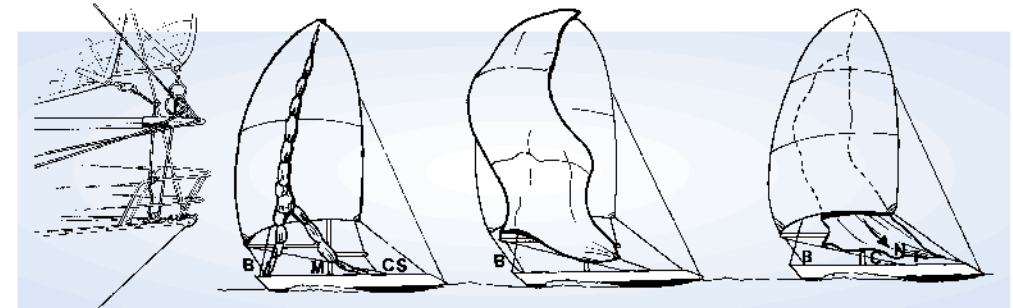

### SPINNAKER CHANGE – OUTSIDE PEEL STARBOARD GYBE

- |   |  |
|---|--|
| <b>T/H:</b> Make decision to change spinnaker.  | <b>C/P:</b> Ease guy and afterguy to allow pole to swing forward.                        |
| <b>W:</b> Calls warning 'Spinnaker change – outside peel – up spinnaker.'   | <b>W:</b> Calls <b>B</b> to 'Spike' spinnaker tack.                                      |
| <b>M/B:</b> Bring up new spinnaker.   | <b>B:</b> Spikes guy to release old spinnaker, then re-attaches guy to tack on new sail. |
| <b>C:</b> Flakes down spinnaker halyard ready to run.   | <b>C:</b> Takes up on spinnaker guy.   |
| <b>B:</b> Prepares new spinnaker ready for hoisting outside existing sail. Takes lazy guy off set spinnaker and clips it on to clew of new sail as a temporary sheet. Clips foredeck stripper to tack of old sail and ties temporarily to deck, then transfers guy to new sail. | <b>B:</b> Releases stripper.   |
| <b>W:</b> Calls 'Hoist' spinnaker.  | <b>C/P/S:</b> Adjust spinnaker set.  |
| <b>M:</b> Jump hoists second spinnaker halyard.   | <b>W:</b> Calls 'Drop' spinnaker.  |
| <b>C:</b> Tails halyard around deck winch and when fully hoisted, calls 'Halyard made.'   | <b>C:</b> Releases spinnaker halyard.  |
|   | <b>M/N:</b> Gather spinnaker in under boom and pass down hatch for packing.              |
|   | <b>Crew:</b> Tidy up and return to standard positions.                                   |